

# Daily Inspection (Medium Duty)

Detailed information for No. ①~⑳ are stated at the back.  
Refer to the concerned No. of the items when you check.

## -PRECAUTION-

- 1) Check and repair any defective parts or malfunction found at the previous operation regardless of this inspection.
- 2) Let the engine idle until the coolant temperature gauge starts to move. When the engine is cold, do not raise it nor leave it at high speed engine revolution.
- 3) After all inspection is completed, make sure that the load condition is proper.

**START**



### 1 Front right wheel...

- Check front right tire & wheel nuts condition. [13 14 15 16]



### 2 Front of vehicle...

- Check coolant level. [①]
- Check clutch fluid level. [⑧]
- Check amount of window washer solution. [⑨]
- Check light function. (stain, damage, lighting, blinking)



### 3 Left side of vehicle...

- Check engine oil level. [②]
- Check water separator. [③]
- Check front left tire & wheel nuts condition. [13 14 15 16]




**FINISH**



### 8 Inside of cab...

- Check indicator and warning light condition. [17]
- Check engine starting condition. [4]
- Check function of parking brake. [6]
- Check windshield damage and stain. [10]
- Check the condition of windshield washer and wiper condition. [11]
- Check reflecting condition of rear-view mirrors. [12]
- Check lighting & flashing beam function. [18]
- Check steering and horn function. [19]
- Check the fuel level. [20]

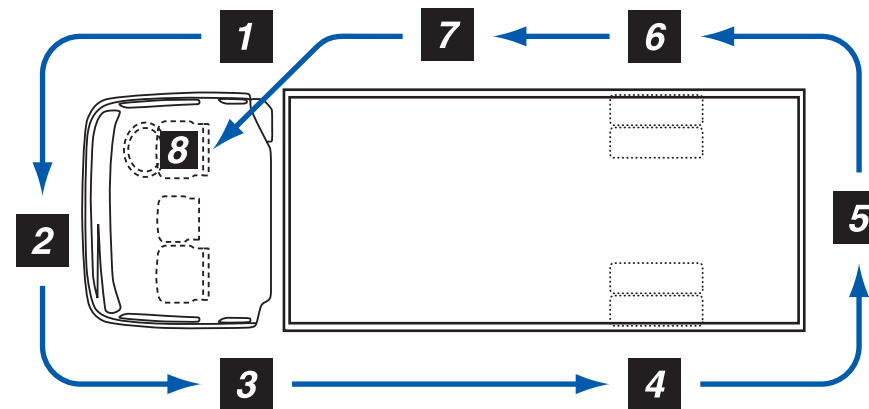

### 7 Right side of vehicle...

- Drain water in the air tank. [5 Full air brake and air over brake only]
- Check brake fluid level. [7 Hydraulic brake and air over brake only]



### 6 Rear right wheel...

- Check rear right tire & wheel nuts condition. [13 14 15 16]



### 5 Rear end...

- Check light operating condition. (stain, damage, lighting, blinking)



### 4 Rear left wheel...

- Check rear left tire & wheel nuts condition. [13 14 15 16]



HINO QUALITY SERVICE