

Update Date : 2017-03-12 Print Date : 2020-02-27

12-34 REGULAR MAINTENANCE

A: Check and adjust if necessary **I:** Inspect, clean and correct or replace as necessary
L: Lubricate **R:** Replace or change **T:** Tighten to specified torque

No.	SERVICE INTERVALS (Odometer reading or months, whichever comes first)	ODOMETER READING x 1000 km x 1000 miles	FIRST		EVERY												MONTHS (EVERY)			
			1	5	5	10	15	20	25	30	40	45	50	60	90	120				
15	STEERING																			
15-1	Steering gearbox and linkage mounting bolts tightness			A														A		12
15-2	Sub booster and link rod ball joint dust cover damage (Production code FY)							A												—
15-3	Steering shaft spline and universal joint			L		L														2
15-4	Play, looseness and damage of steering shaft and drag link ball joint							A												—
16	POWER STEERING																			
16-1	Power steering install parts tightness			A														A		12
16-2	Power steering reserve tank strainer and filter element			A														I		I:12
16-3	Power steering fluid			R														R		12
16-4	Rubber parts for power steering																			R:48
16-5	Rubber hose for power steering	Low pressure																		R:48
		High pressure																		R:24
17	WHEEL PARKING BRAKE																			
17-1	Damage and tightness of air tube					A														—
17-2	Control valve and relay valve function																			A:12
17-3	Rubber parts for air valve (Parking brake control valve)																			I:24
17-4	Brake chamber diaphragm																			R:24
17-5	Rear spring brake chamber (Piggyback)																			R:36
17-6	Rust and damage to spring of spring brake chamber																			A:24

(Continued)