

HINO 700 Series *Daily Inspection*

-PRECAUTION-

- 1) Check and repair any defective parts or malfunction found at the previous operation regardless of this inspection.
- 2) Let the engine idle until the coolant temperature gauge starts to move. When the engine is cold, do not raise it nor leave it at high speed engine revolution.
- 3) After all inspection is completed, make sure that the load condition is proper.

START

FINISH

1 Front right wheel...

- Check front right tire & wheel nuts condition. [11][12][13][14]

2 Front of vehicle...

- Check coolant level. [1]
- Check engine oil level. [2]
- Check amount of window washer solution. [7]
- Check light function. (stain, damage, lighting, blinking)

3 Front left wheel...

- Check front left tire & wheel nuts condition. [11][12][13][14]

8 Inside of cab...

- Check indicator and warning light condition. [15]
- Check engine starting condition. [3]
- Check function of parking brake. [5]
- Check windshield damage and stain. [8]
- Check the condition of windshield washer and wiper condition. [9]
- Check reflecting condition of rear-view mirrors. [10]
- Check lighting & flashing beam function. [16]
- Check steering and horn function. [17]
- Check the fuel level. [18]

7 Right side of vehicle...

- Drain water in the air tank. [4]

6 Rear right wheel...

- Check rear tire & wheel nuts condition. [11][12][13][14]

5 Rear end...

- Check light operating condition. (stain, damage, lighting, blinking)

4 Rear left wheel...

- Check rear left tire & wheel nuts condition. [11][12][13][14]

